



● FOR 952-2C
SYSTEM RELAY USE
PYF08A-A




OUTLINE

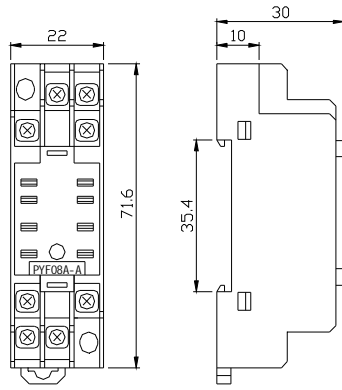

DRILLING PLAN

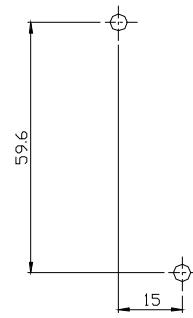


WIRING DIAGRAMS

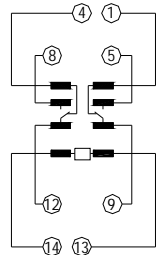


● FOR 952-3C
SYSTEM RELAY USE
PYF11A-A




OUTLINE

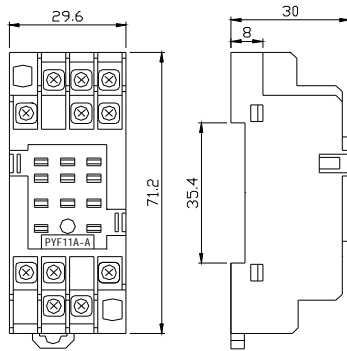

DRILLING PLAN

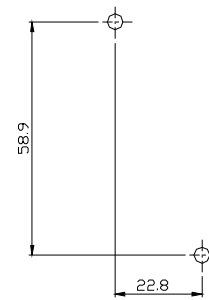


WIRING DIAGRAMS

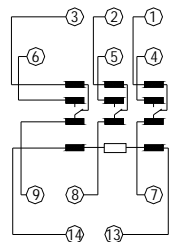


● FOR 952-4C
SYSTEM RELAY USE
PYF14A-A




OUTLINE

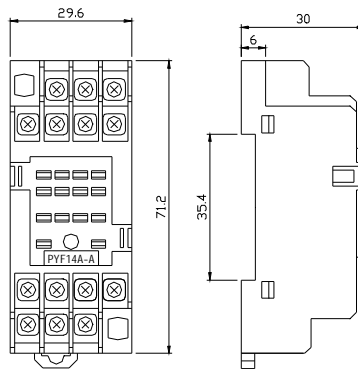

DRILLING PLAN

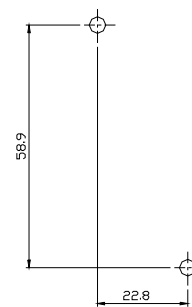


WIRING DIAGRAMS

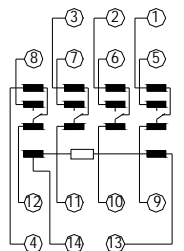


PF113A-A




OUTLINE

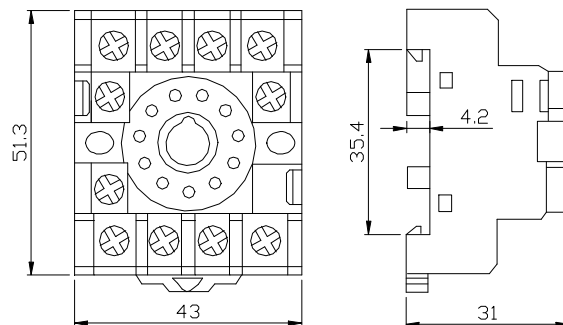

DRILLING PLAN




WIRING DIAGRAMS

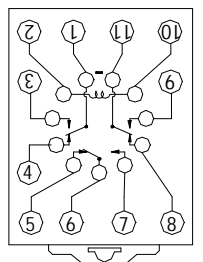


● FOR 952-2C
SYSTEM RELAY USE
PYF08A-E




OUTLINE

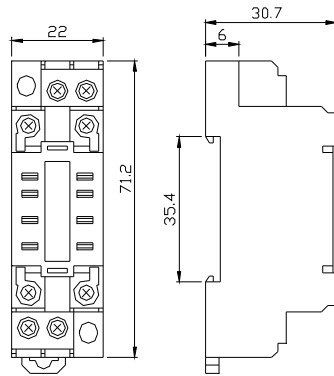

DRILLING PLAN

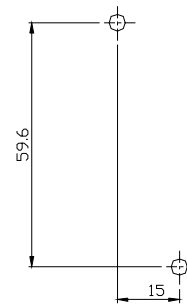


WIRING DIAGRAMS

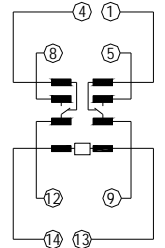


● FOR 952-3C
SYSTEM RELAY USE
PYF11A-E




OUTLINE

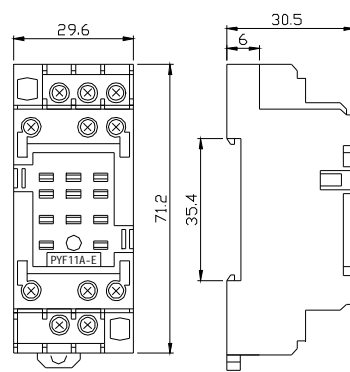

DRILLING PLAN

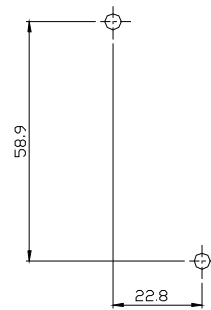


WIRING DIAGRAMS

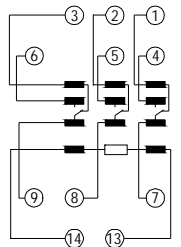


● FOR 952-4C
SYSTEM RELAY USE
PYF14A-E




OUTLINE

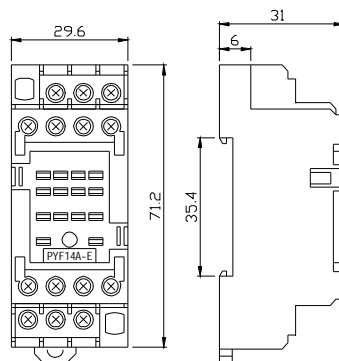

DRILLING PLAN

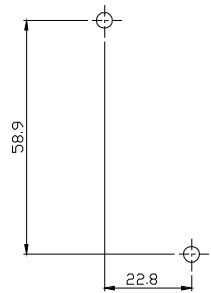


WIRING DIAGRAMS

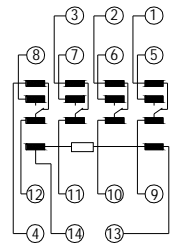


PF113A-E



OUTLINE

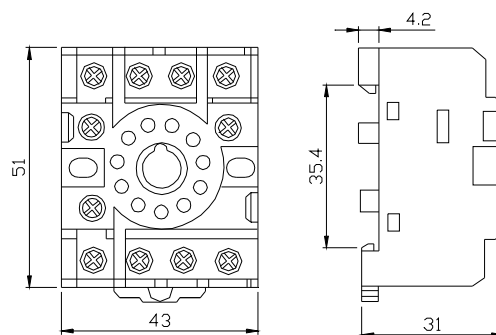

DRILLING PLAN



WIRING DIAGRAMS

